

Uber Driveulator/ UD-1

U s e r G u i d e

Operation of the UD-1

Operation is fairly straightforward. There are two inputs on the front side of the unit: a 1/4" input jack on the right and a 1/4" output jack on the left with a battery-ground switch on the input jack.

Power Supply: 9 volts DC. Either internal using a 9 volt Battery. To access, remove the four screws on the sides of the unit and pull apart. Note! Battery must have at least 7 volts for unit to work!

Or external using a mini plug, Tip positive. External supplies should be 9volt DC regulated.(100milliamp or more),


CONTROLS

There are three controls on the unit-Drive, Tone and Volume, a mode switch to switch between Loose or tight plus a foot switch to bypass the effect, and an LED to indicate effect operation. On the side there is a trim pot to set the overall gain of the unit.

Drive: Increases the gain of the distortion circuit which increases the distortion and sustain of the unit.

Tone: a high cut filter use it to make your sound warmer and fatter.

Volume: This control sets the overall output of the unit. Use this for level matching between the effected and unaffected signal.

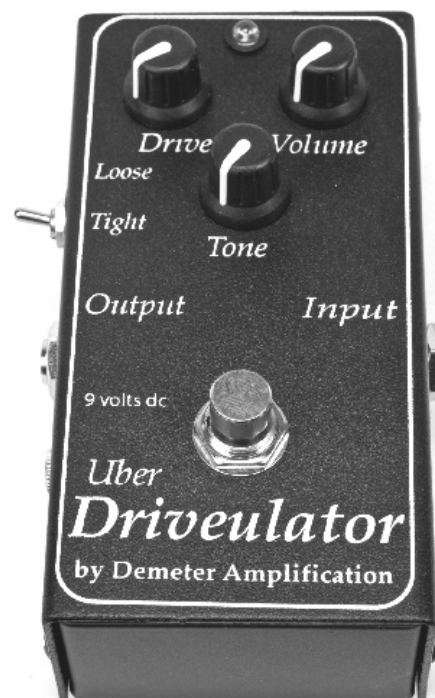

Tight-Loose Switch: This switches between Light Emitting Diodes and Germanium diodes for the distortion generating devices. LED's have a tight sound and are a bit louder. Germanium diodes have a looser more classic fuzz sound with less output volume.

TRIM POT. Sets the gain of the Drive output amplifier. It is useful to turn it up if you are using the Silicon diodes (lose) as your primary distortion setting. Or you can turn it down if the unit is too hot for your system

